River Country Products Instructions & Care



Congratulations on purchasing your new **Hammock**! Your Hammock will give you years of use if you follow these instructions. Please read the instructions before setting up your hammock and retain them for future reference.

CHECK YOUR EQUIPMENT

Your Hammock comes with two carabiners, ropes, and cord for the netting. Tree Straps are recommended but are not included.

Do not use the rope if it is frayed or braking, or if you are not sure about how to tie a secure knot. Rope is more likely to slip and should be tied just above a knot or branch so that the rope does not slip down the tree while you are in the hammock.

Do not use hammock if torn or damaged.

ASSEMBLY

Important Please follow these instructions:

Find two trees that are approximately 10 to 14 feet apart. Hammock is 10 feet long with cords.

Make sure both ends of the hammock support rope are connected to the carabiner.

Use hammock straps or rope that is secured around the tree and hook the Carabiner to the hammock strap.

Tighten to the desired tension using the tree straps or rope.



If you want to use the hammock without the bug net, set it up with bug net down (upside down).

Next use the included black or orange cord to secure the bug net. String the cord through the fabric loops at the top of the bug netting, than loop the cord around the tree. Insert the plastic clip and slide it until you can loop the end around the tree. Insert the end that you



just looped around the tree back into the clip and tighten to desired tension.

CARE AND USE

Do not store damp or wet, Hammock can be stuffed back into the attached bag after use.

WARRANTY AND RETURNS

Please contact us at <u>Sales@RiverCountryProducts.com</u>.

CONTACT INFO

Contact us with any questions, concerns, or ideas to improve our products.

www.RiverCountryProducts.com Kennewick, Washington Sales@RiverCountryProducts.com