

# Using the RCP Extension Piece

1. Unclamp end clamps and loosen the clear plastic tightener.
2. Remove the adjustable bottom section of the trekking pole from the handle section.



3. Insert adjustable section from each pole into each end of the extension piece. (If it catches when inserting, pinch the plastic ends and angle slightly to get the pole in the extension. Some force may be required.)



4. With the plastic tip attached, Insert into peak of tent and extend the pole until the tent is taught.



## WARRANTY AND CONTACT

For any manufacturing defects please contact us at:

[sales@rivercountryproducts.com](mailto:sales@rivercountryproducts.com). We have a 1 year limited warranty.

Thank you for purchasing our tent, if you have any suggestions on how we can improve our products or questions please email us and let us know.

Have fun camping!

